

CONFY CARE®



ELT35PRO
Procedure Chair
USER GUIDE

SAFETY PRECAUTIONS

1. During the adjustment of the table, do not put any part of the body into the gap of any moving parts.
2. Please operate with both hands when adjusting the leaning angle of back, foot or head sections.
3. When the patient is on the table, it is not recommended to adjust the angle of the table top.
4. Before using the product, ensure the four feet of the table frame touch the ground at the same time and check the stability of the table frame.
5. Before connecting to the power supply, please check whether the incoming line to the controller is intact.
6. A regular inspection (at least once a year) is needed for the treatment table.
7. Do not exceed the table weight capacity of 250 kg. The safe working load of the arm rest is 15 kg.
8. Always clean the table after each use with a soft cloth dampened with water and a mild antibacterial detergent. Do not use abrasive cleaners.
9. Disconnect the table from the power source before attempting any maintenance, installation, removal or replacement procedures to prevent electrical shock and possible damage to the table.
10. Please DO NOT make any changes to the table. Replacement parts or labor furnished can be provided by CoinfyCare, the selling dealer or a service technician certified by the manufacturer.

CONTENTS OF CARTON

Procedure chair: 1 unit
User Guide: 1 unit

NORMAL OPERATING CONDITIONS

Temperature: 0 °C - 40 °C
Relative humidity: 10% - 95%
Air pressure range: 860-1060hpa
Power supply: AC 100-240V, 50/60Hz

SCOPE OF APPLICATION

Hospital orthopedics department, rehabilitation department, chiropractic department, sports injury rehabilitation center for carrying and nursing patients.

REGULATION AND PRODUCT STANDARDS

This table complies with the European regulation of medical devices (EU) 2017/745 and with the following standards:

- EN 60601-1:2006+A1:2013+AC:2014
Medical electrical equipment. Part 1: General Requirements for Basic Safety and Essential Performance.
- IEC/EN 60601-2-52:2009+A1:2015 clause 201.9.8.3.2
Medical electrical equipment. Part 2-52: Particular requirements for basic safety and essential operation of medical tables.
- EN 60601-1-6:2010+A1:2015
Medical electrical equipment. Part 1-6: General Requirements for basic safety and essential performance. Collateral standard: Possibility for use
- EN 60601-1-2:2015
Medical electrical equipment. Part 1-2: General requirements for basic safety and essential performance. Collateral standard: Electromagnetic disturbances. Requirements and tests.
- EN ISO 13485:2016
Medical devices - Quality management systems - Requirements for regulatory purposes (ISO 13485:2016)
DIN EN ISO 13485:2016

PRECAUTIONS AND SAFETY INDICATIONS

CoinfyCare is not liable for any material or personal damage due to misuse or incorrect use of this table or for any purpose other than described in this user guide.

Inspect the condition of the table before using it for the first time and on a recurring basis as indicated in the "MAINTENANCE" section.

Keep table out of high moisture environments.

Do not transport the table over rough or outdoor surfaces. The retractable caster system could become damaged and inoperable.

This table should be operated, transported, and stored in temperatures between -10° C to +50° C, with max humidity of 95%.

DO NOT operate this table in an environment where other devices are being used that intentionally radiate electromagnetic energy in an unshielded manner. Portable and mobile communications equipment can affect Medical Electrical Equipment.

This table generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to other devices in the vicinity. However, there is no guarantee that interference will not occur in a particular installation. Harmful interference to other devices can be determined by turning this table on and off. Try to correct the interference using one or more of the following: reorient or relocate the receiving device, increase the separation between the equipment, connect the table to an outlet on a different circuit from that which the other device(s) are connected, and consult CoinfyCare or your local dealer for help.

Unplug the table from the power supply before starting cleaning or any type of maintenance operations.

The table should be kept out of the reach of children when there is no adult supervision.

The table is designed for discontinuous interval operation, so the continuous running time of the motor should never exceed 2 minutes. Should this happen, damage may occur due to overheating of the electronics.

Always use original accessories and spare parts provided by your local dealer.

Always cover the table with a towel, disposable paper or a cover and change it for each user, thus ensuring correct hygiene and extending the useful life of the upholstery.

Only connect the table to a properly installed and grounded outlet. The local mains voltage must correspond to the technical data of the device.

The power outlet should be accessible in case the table needs to be quickly unplugged at any given time. Always pull the plug and not the mains cable.

Unplug the table from the power supply before starting cleaning or any types of maintenance operations.

⚠ NOTE: Battery capacity diminishes over time. Charge batteries regularly to maintain healthy battery life. Recommended to replace battery every two (2) years or as required.

TECHNICAL SPECIFICATIONS

Product dimensions

Length: 1980mm

Width: 900mm(seat width 600mm)

Lifting range of table surface: 590-890mm

If the electrical supply cable is defective, disconnect the table immediately and inform your dealer or a specialized technician.

Position the power cord properly so that it cannot be tripped over.

Unplug the power cord from the mains if the table is not going to be used for a long period of time.

If you detect any abnormality in the operation of the table, consult your dealer or a specialized technician.

Never manipulate any electrical part or open or repair any part of the table.

Only your dealer or a specialized technician should repair the table.

Never touch the table or the power cord with wet hands.

Never place your hands or any other part of your body in any hole or void on the table while it is in operation.

Make sure there are no objects in the space under the table that could cause collisions or entrapment during operation.

Make sure that your feet are not resting on the peripheral foot bar or foot control during treatment and especially when sitting near the table. This could create a dangerous situation where your leg is caught between the section and the peripheral foot bar or floor surface.

Take into account the weight distribution on the table when working. The weight must be distributed along the table without concentrating on its ends to maintain the correct stability.

You should not sit on the head and foot sections. If you do, there is a danger of tipping and table damage.

PLACEMENT IN THE WORKPLACE

The table has four casters to facilitate movement to the place where it will be used.

OPERATION

Connect the table to an electrical outlet using the power cord.

Moving and adjusting the table

The table bottom frame is equipped with four control casters.

Empty the head of the table and make sure that the casters at the rear of the table are active.(Figure 1)
The foot bar is lifted up to indicate the movable state of the table.

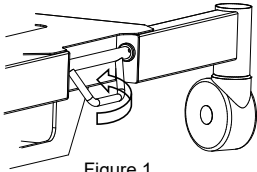 


Figure 1

After moving, please confirm whether the four casters are in full contact with the ground, otherwise step down on the foot bar to lock the table.(Figure 2)

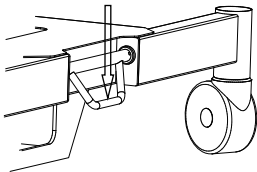 


Figure 2

Head angle adjustment

- As shown in Figure 3, pull the control lever (in the direction shown by the arrow) to adjust the angle of the head plate.
- When adjusted to the desired angle, release the control lever to be parallel to the chair surface and the chair surface angle will be locked.

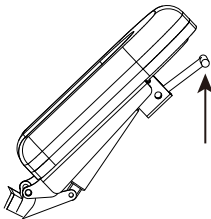 


Figure 3

Handset functions

Handset for adjusting height & tilt & angle of waist section,leg section of the table.
Before adjusting, make sure there are no objects in the space below the table that could cause collisions or entrapment.

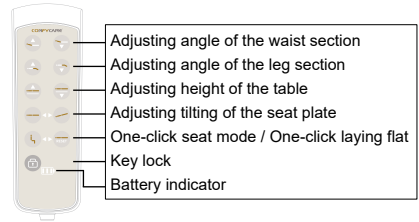 


Figure 4

- Press button Line 1 on the handset to adjust the waist section of the table upward and downward (Figure 5). When the required angle is reached, release the button, and the angle of waist section will be locked automatically.

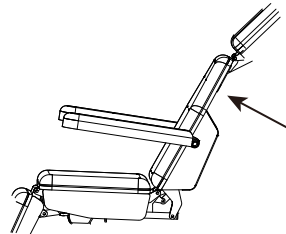 


Figure 5

- Press button Line 2 on the handset to adjust the leg section of the table downward (Figure 6). When the required angle is reached,release the button, and the angle of leg section will be locked automatically.

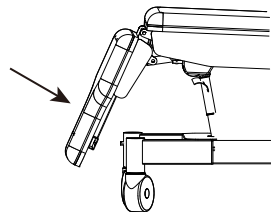 


Figure 6

- Press button Line 3 on the handset to adjust the height of the table.(Figure 7)
Adjustable height range 590mm-890mm.

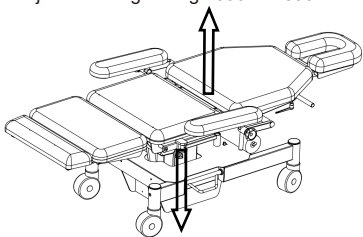 


Figure 7

- Press button Line 4 on the handset to adjust the tilt angle of the middle plate,make it uptilt and downtilt (Figure 8). When the required tilt angle is reached, release the button, and the tilt angle will be locked automatically.

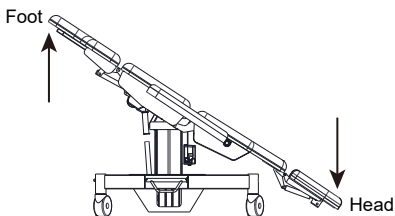 


Figure 8

- Press button Line 5 on the handset to achieve one-click seat mode(Figure 9).

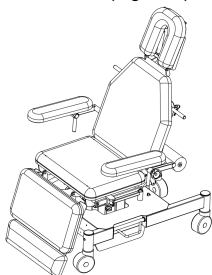 


Figure 9

- Press button Line 5 on the handset to one-click lay flat(Figure 10).

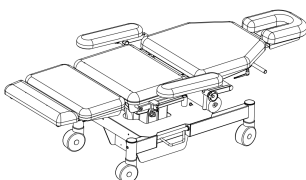 


Figure 10

Armrest installation

- Insert the armrests rod into the round hole on both sides of the waist section.
- Adjust side screw to adjust the height of the armrests (Figure 11).

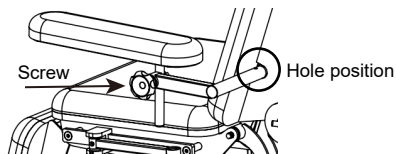 


Figure 11

Push handle installation

- Turn the knob upwards,then insert the push handle into the round pipes on both sides of the waist section, and turn the knob downward to lock the handle tightly (Figure 12).

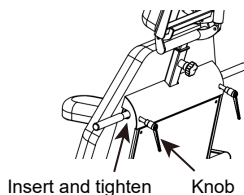 


Figure 12

Arm support installation and adjustment (optional accessory)

- Insert the arm support into the round pipes at the top of the head section, and rotate and turn the knob tightly (Figure 13).
- The U-shaped arm support can be lifted upwards by 90° (Figure 14).

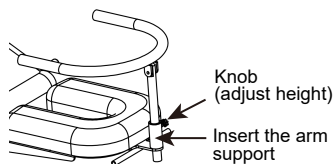 


Figure 13

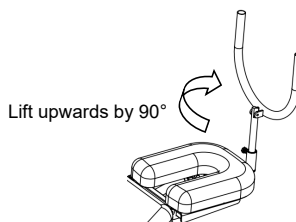 


Figure 14

IV pole bracket installation (optional accessory)

- Insert the IV pole bracket into the side stainless steel guide rail.
- Pull out the bracket and insert IV pole (Figure 15).

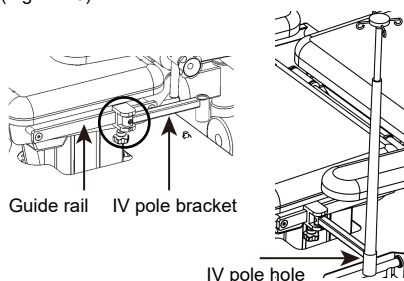 


Figure 15

Installation of stirrups (optional accessory)

- Insert the stirrups bracket into the side stainless steel guide rail and tighten with the bottom knob.(Figure 16)
- Pull out the elastic pin to adjust the length of the stirrups.

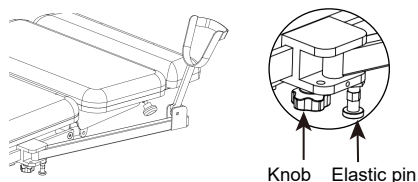 


Figure 16

Foot switch (optional accessory)

Foot switch for adjusting height & tilt & angle of waist section,leg section of the table.
Before adjusting, make sure there are no objects in the space below the table that could cause collisions or entrapment.



Figure 17

- Line 1: Adjusting angle of the waist section
- Line 2: Adjusting angle of the leg section
- Line 3: Adjusting height of the table
- Line 4: Adjusting tilting of the seat plate
- Line 5: One-click seat mode / One-click laying flat or Reset

Debris tray

- Debris tray under the leg section. There are slides on both sides to pull in and out. Then the debris tray can be pushed in or pulled out through the bottom of the leg plate for easy operation.(Figure 18).

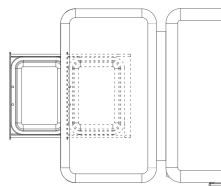 


Figure 18

Legend to symbols and information on the product label.

- **Model:** Product identification.
- **Model Num.:** Product version.
- **CE** : CE conformity marking.
- **MD** : Medical Device
- **SN** : Unique serial number identifying the product.
- **W** : Date of manufacture.
- **Product Net Weight** : Table weight in kg.
- **INPUT** : Necessary values of the electrical mains supply.
- **ON: 2 min / OFF: 18 min**: Indicates the discontinuous operation of the device according to IEC/EN 60601-1, which indicates that 2 minutes of continuous operation of the motor or motors should not be exceeded.
- : Consult the instructions for use or the user guide.
- : Maximal load capacity that the table can support.
- : Maximum patient weight.
- : Waste from Electrical and Electronic Equipment. Selective waste collection of electrical and electronic equipment is required.
- : Classification of medical electrical equipment - Double Insulation.
- : Electrical Safety Classification - Type B.
- **IPX4** : Protection against splashing water or liquids.
- : Manufacturer identification.
- **EU REP** : Authorized representative in the EU.
- : Importer.

TROUBLESHOOTING

If, during the life of the table you detect any malfunction or need a repair, contact your dealer and do not use the table until you have received a diagnosis or the table has been professionally repaired.

MAINTENANCE

Carry out a visual inspection at least once a month to check the general conditions of the table. Moreover, you must do the following:

- Check the correct adjustment of the different sections.
- Check the proper functioning of the motors and their movements.
- Check and clean the gas struts
- Check and tighten screws (if necessary).
- Grease the parts with friction.
- Check the conditions of the electrical wiring and the socket.
- Check the wheel immobilization system.

RECYCLING

If you need to dispose of the table or any of its parts or accessories, consult and respect the laws and regulations applicable to waste management and protection of the environment.

CLEANING AND DISINFECTION

Before cleaning the table, unplug it from the mains. Clean the table after each use.

Dust the table with a soft, dry cloth.

To clean the upholstery, apply a solution of warm water and a mild detergent (for example, neutral soap) with a well wrung soft cloth. Wipe the table over once cleaned.

Disinfect upholstery and other surfaces with a suitable bactericide for this purpose.

Apply the disinfectant on a soft cloth, never directly on the table.

Never use a mixture of disinfectants or a mixture of disinfectant and soap.

Wipe the table upholstery over once cleaned & disinfected with a cloth and water only. This will remove any residue from the upholstery.

Avoid the accumulation of moisture on the moving parts of the metal structure, as they could rust.

Since we do not know which disinfectant will be used, we cannot guarantee that it will not cause damage to the upholstery. Read the instructions and warnings for use of the disinfectant product carefully before its purchase or use.

WARRANTY

This warranty shall remain in effect for 5 years (60 months) for the structure and 3 years (36 months) for the base frame and motor from the date of original consumer purchase. An original sales receipt or proof of purchase may be required in order to redeem the warranty.

All repairs to the Product must be performed by a service center certified by CoinfyCare. Any modifications or repairs performed by unauthorized centers or groups will void this warranty. This statement of guarantee prevails over any other statement specified or implied by the seller.

TRANSPORTATION AND STORAGE CONDITION

Transport condition

The products can be transported by general means of transportation. They should be protected from the sun and rain, and should not be mixed with toxic, harmful and corrosive materials.

Storage

The packed electric multifunctional physiotherapy bed should be stored in a dry and well ventilated environment without corrosive gas.

This table should be operated, transported, and stored in temperatures between -10° C to + 50° C, with max humidity of 95%.

SHUTDOWN PROCEDURE

Adjust the bed to a suitable position to ensure that the patient is safely left, then turn off the power.

Contraindication

Please note that our beds are not sterilized. Please do not use them according to aseptic standards.

CONTACT

Applicant / company name / after sales service unit:

Huangshan Jinfu Medical Equipment Co., Ltd
Domicile / production address: No. 17,
Qiliting, Qimen County, Huangshan City,
Anhui Province China
Tel: 0086 571 87006218
www.coinfyCare.com



European legal representative:
LOTUS NL B.V.
Koningin Julianaplein 10, 1e Verd 2595AA,
The Hague, Netherlands

CONFY CARE[®]